CABINET PARTS

For Models: LER7646JQ0, LER7646JT0

(Designer White) (Biscuit)

ELECTRIC DRYER

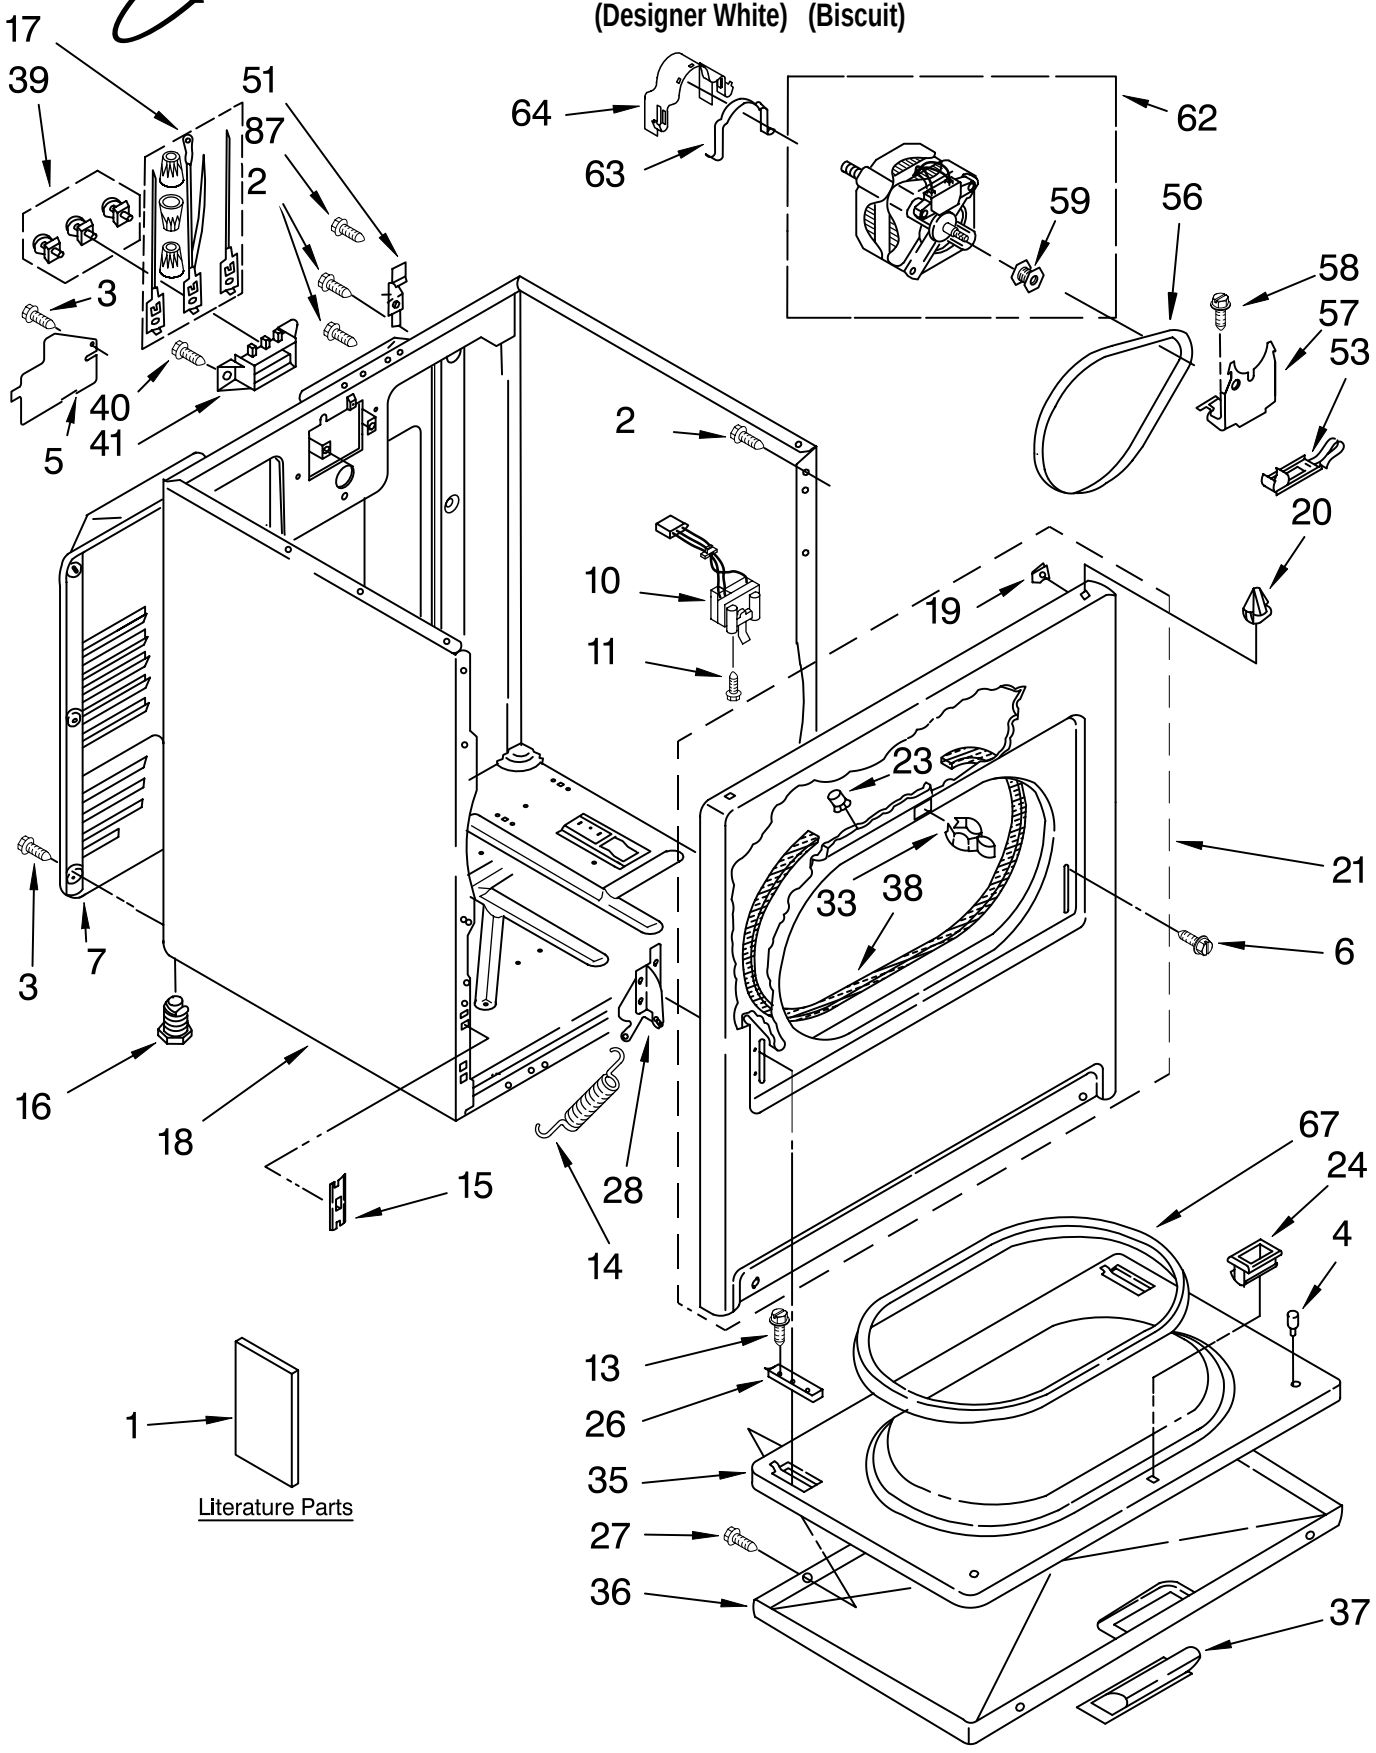

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CABINET PARTS

For Models: LER7646JQ0, LER7646JT0

(Designer White) (Biscuit)

Illus. No.	Part No.	DESCRIPTION
1		LITERATURE PARTS
	LIT3397618	Installation Instructions
	LIT8314844	Use & Care Guide
	LIT3406692	Wiring Diagram
2	343641	Screw, 10−16 x 1/2
3	693995	Screw, Hex Washer Head
4	238614	Bumper
5	3396795	Cover, Block
6	342043	Screw, 10−32 x 1/2
7	3396805	Panel, Rear
10	3406107	Door Switch Assembly
11	697773	Screw, 6−20 x 7/8
13	3357011	Screw, 10−16 x 1/2
14	692495	Spring, Door (2)
15	3394083	Clip, Front Panel (2)
16	3392100	Foot, Dryer
	279810	Foot − Optional (Extended Length Package Of 2) (Not Included)
17	279318	Terminal, Tinned & Brass (3) (Includes Illus. 39)
18		Cabinet (Includes Illus. No's. 5, 7, 15, 16, 41 & 57)
	3399585	White
	3399595	Biscuit
19	98234	Clip, Ground
20	690363	Lock, Front Top (2)
21		Panel, Front
	695620	White
	3977244	Biscuit
23	685203	Clip, Felt Pad (3)
24	3389441	Catch, Door Assembly
26	337189	Clip, Hinge (2)
27	694091	Screw (6)
28	8066056	Hinge, R.H.
	8066057	Hinge, L.H.
33	696144	Strike, Door
35	695737	Door, Rear
36		Door, Front
	3393549	White
	3977241	Biscuit
37		Handle, Door
	690270	White
	3977242	Biscuit
38	3406129	Seal & Bearing Assembly
39	279393	Terminal Block Kit (For Terminal Block)
40	3393008	Screw, 10−16 x 1/2
41	3397659	Block, Terminal
51	238088	Hinge, Top (2)
53	3394332	Idler & Slide Assembly
56	8066065	Belt, Drive
57	348780	Base, Motor
58	3400500	Bolt, 5/16−18 x 3/4
59	3394341	Pulley, 60 Hz.
62	3976707	Motor Assembly 60 Hz.
63	660658	Clamp, Motor
64	3404162	Clamp, Motor (W/Shield)
67	3390731	Seal, Door
87	697776	Screw, 10−32 x 1/2 (External Ground)

TOP AND CONSOLE PARTS

For Models: LER7646JQ0, LER7646JT0
(Designer White) (Biscuit)

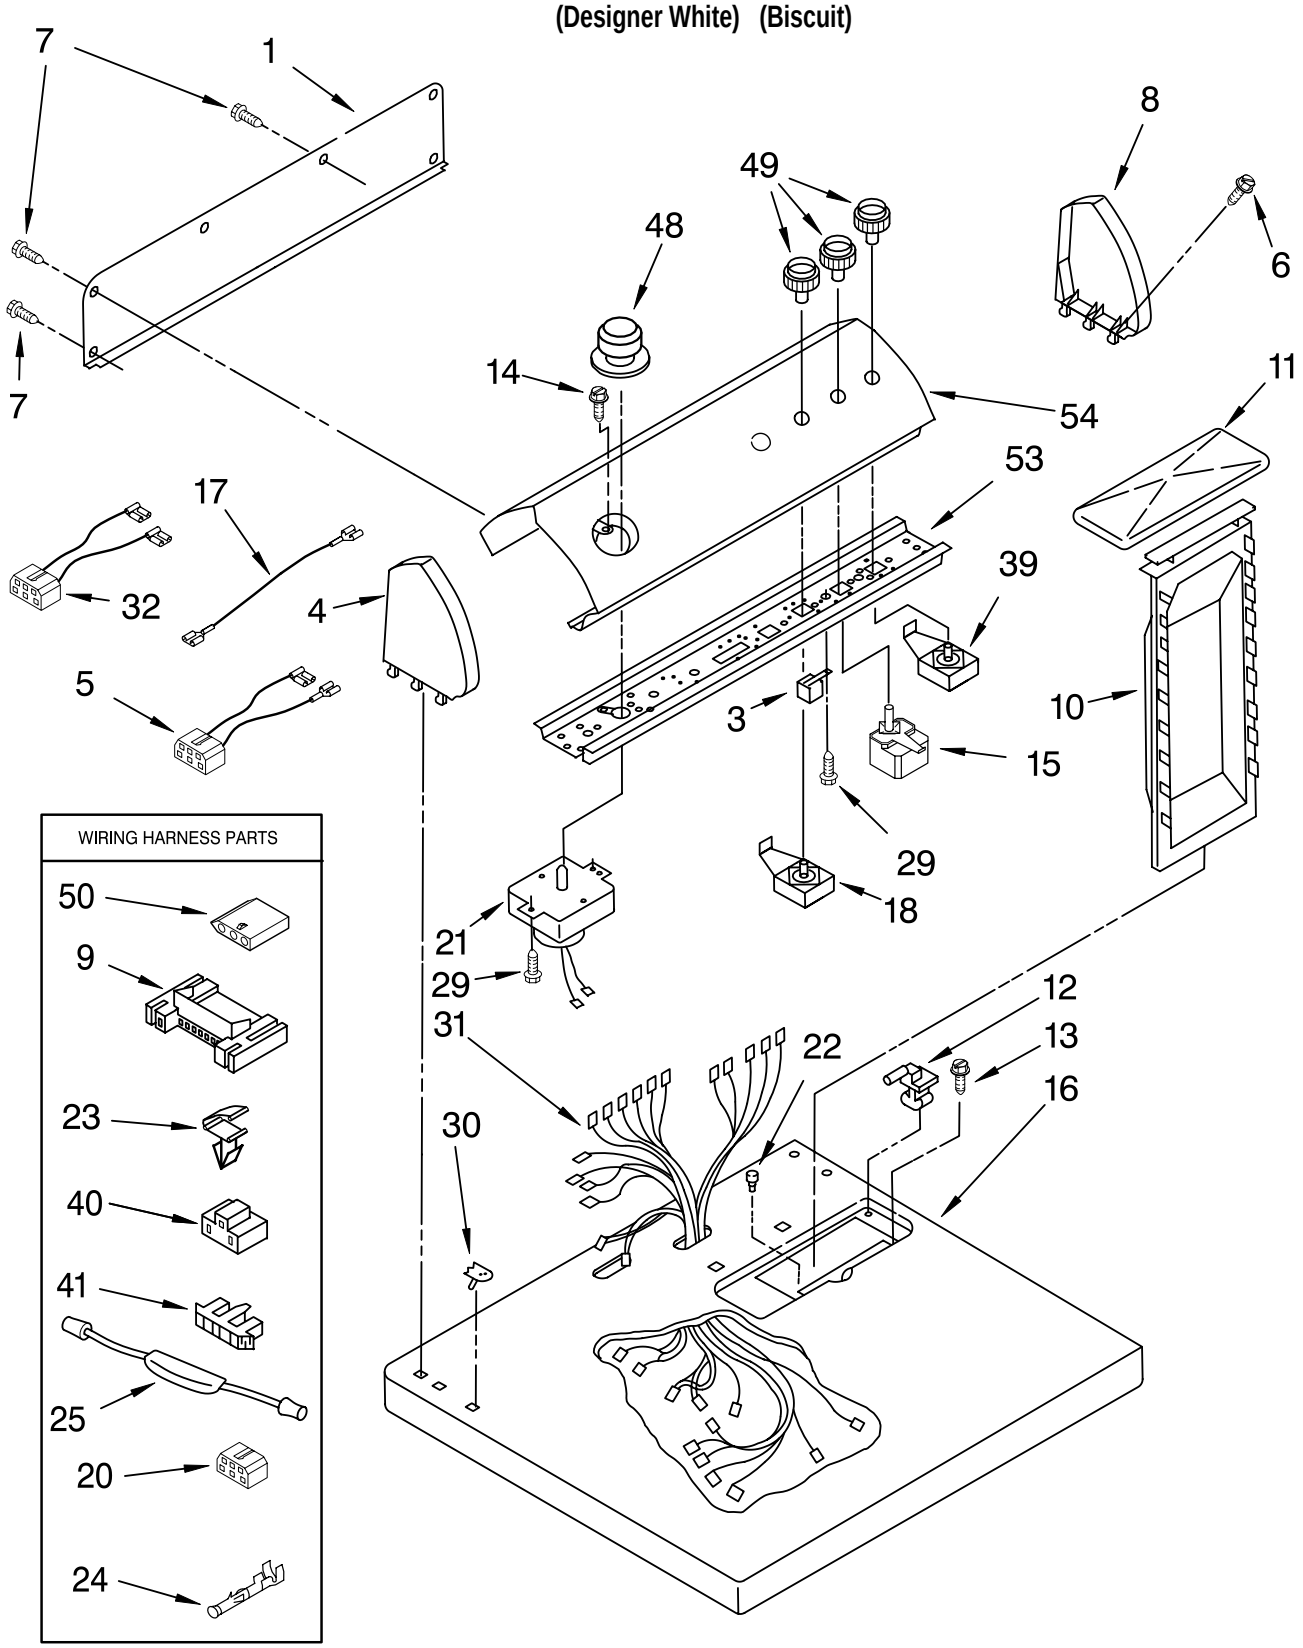

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

TOP AND CONSOLE PARTS

For Models: LER7646JQ0, LER7646JT0

(Designer White) (Biscuit)

Illus. No.	Part No.	DESCRIPTION
1	8274261	Panel, Rear Console
3	694419	Buzzer, Mini
4		Cap, End (L.H.)
	8271365	White
	8271368	Biscuit
5	3397695	Wire, Jumper (Guard/On−Off)
6	388326	Screw, Console
7	693995	Screw, Hex Head
8		Cap, End (R.H.)
	8271359	White
	8271362	Biscuit
9	3395683	Housing, Connector (Motor)
10	349639	Screen, Lint
11		Cover, Lint Screen
	8283378	White
	8283380	Biscuit
12	3978605	Hinge, R.H.
	3978606	Hinge, L.H.
13	688983	Screw, 8−15 x 5/8
14	3400859	Screw, Grounding
15	3405156	Switch, Finish Guard
16		Top
	8271390	White
	8271392	Biscuit
17	3401684	Wire, Jumper (Black)
18	3399639	Switch, Temperature
20	3347243	Connector 6−Circuit
21	8299766	Timer, 60 Hz.
22	297535	Bumper, Lint Lid
23	3394427	Clip, Harness
24	94614	Terminal
25	3401075	Resistor Assembly
29	3390646	Screw, 8−18 x 5/16
30	357213	Nut, Push−In (2)
31	3394300	Harness, Wiring
32	3396029	Wire−Jumper Assembly (Temperature)
39	3398095	Relay, Push−To−Start
40	3401144	Connector (PTS Relay)
41	3397269	Connector (Timer)
48		Timer Knob Assembly
	8312687	White
	8271404	Biscuit
49		Knob, Control
	8271339	White
	8271348	Biscuit
50	3936144	Connector
53	8271418	Bracket, Control
54		Panel, Control
	3977821	White
	3977822	Biscuit

LITERATURE AND OPTIONAL PARTS

PAINT, TOUCH−UP (1/2oz.)

72017	White
4392899	Biscuit

PAINT, PRESSURIZED SPRAY (12 oz.)

350930	White
4392901	Biscuit
350938	Primer, Gray

PAINT, BULK (1 qt.)

799344	White (Uncut)
4392900	Biscuit(Uncut)

Following May Be Purchased

DO−IT−YOURSELF REPAIR MANUALS

LIT677818	Dryer

BULKHEAD PARTS

For Models: LER7646JQ0, LER7646JT0
(Designer White) (Biscuit)

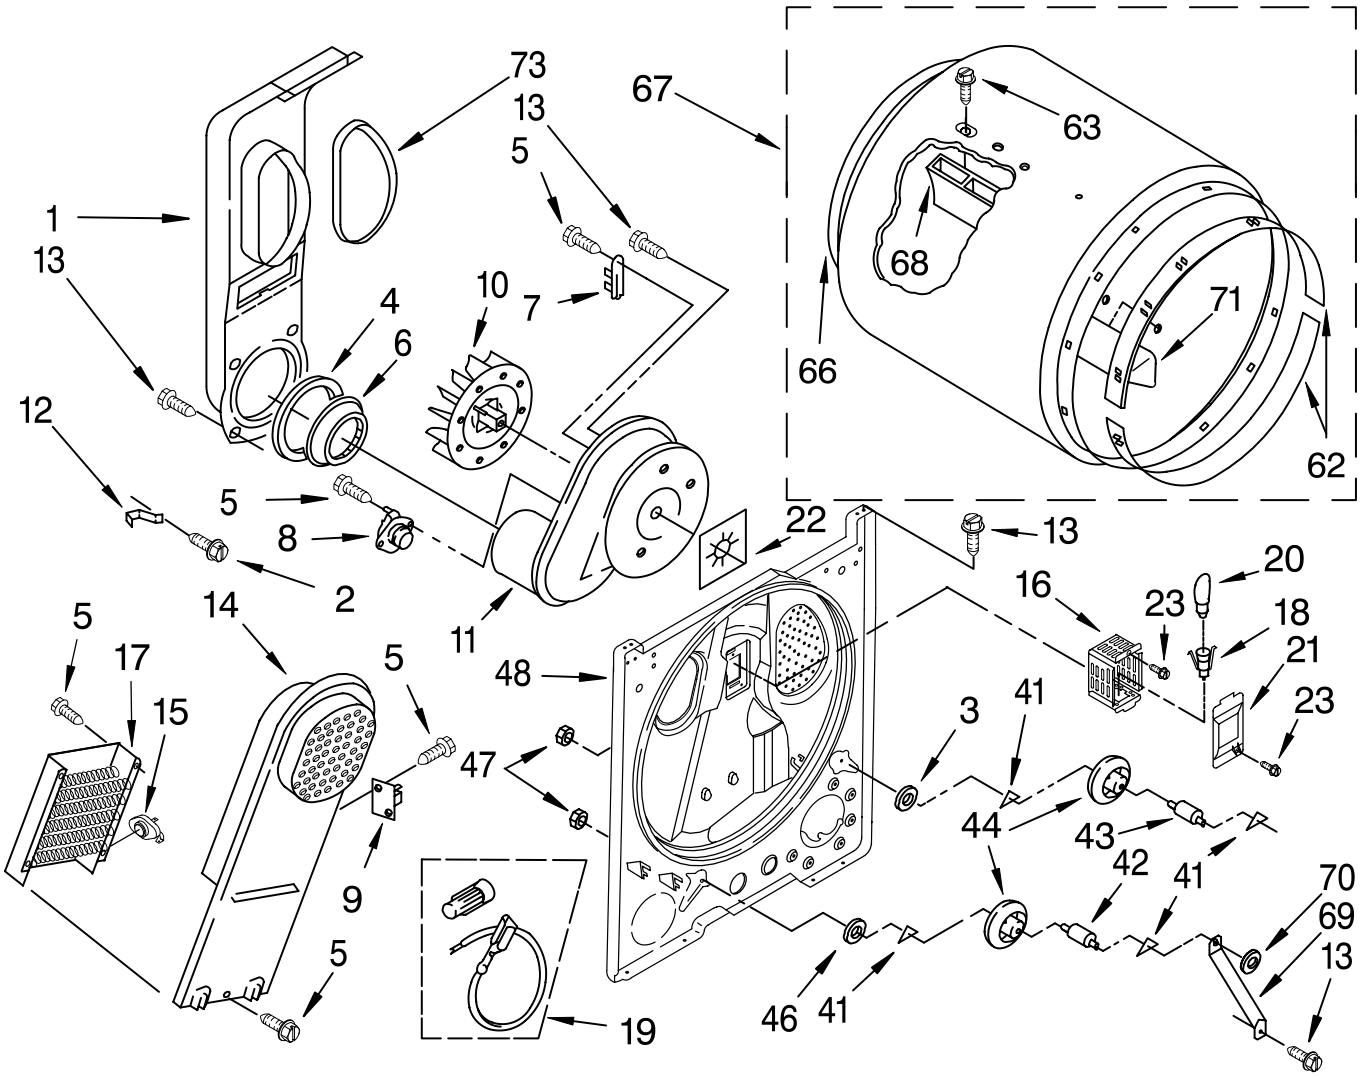

Illus. No.	Part No.	DESCRIPTION
1	348368	Lint Chute Assembly
2	489463	Screw
3	3388703	Washer−Support
4	347139	Seal, Lint Chute
5	90767	Screw, 8A x 3/8
6	696302	Shield, Exhaust
7	3392519	Thermal Fuse
8	3387134	Thermostat, Internal−Bias
9	3977393	Thermal Cut−Off (Hi−Limit Thermostat Illus. No.15 Included)
10	694089	Wheel, Blower (Includes Illus. No. 22)
11	3405016	Housing, Blower
12	3398161	Clip
13	343641	Screw, 10−16 x 1/2
14	3397566	Box, Heater
15	3399693	Thermostat, 250°F (121.1°C)
16	3977373	Bracket, Drum Light
17	3403585	Element, Heater
18	3403634	Socket Assembly
19	279457	Wire Kit, Terminal (For Heater Element Wiring Harness Repair)
20	3406124	Bulb
21	3402841	Lens, Drum Light
22	3394196	Seal, Blower
23	487909	Screw
41	690997	Ring, Tri
42	3399506	Shaft, L.H.
43	3399507	Shaft, R.H.
44	3397588	Roller, Support
46	348197	Washer, Support
47	3359452	Nut, 3/8−16
48	3403493	Bulkhead
62	692526	Ring, Bearing
63	97787	Screw, 11−16 x 7/8
66	3406130	Seal, Rear Drum
67	695587	Drum Assembly
68	692490	Baffle, Drum (2)
69	3976434	Bracket, Support
70	90296	Clip
71	3403636	Baffle, Drum (1)
73	339956	Seal

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST